


Aviva Natural Health Solutions – Bidet Setup Guidelines

BidetSetup

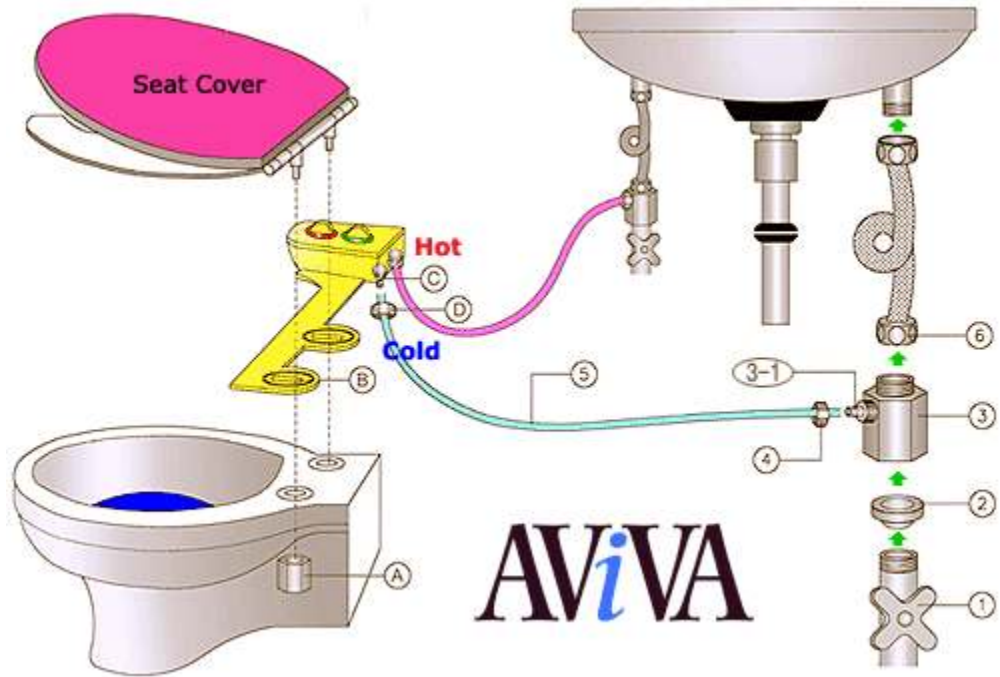


Installation Under The Sink

Step 1


Close the cold shut off valve .

Step 2

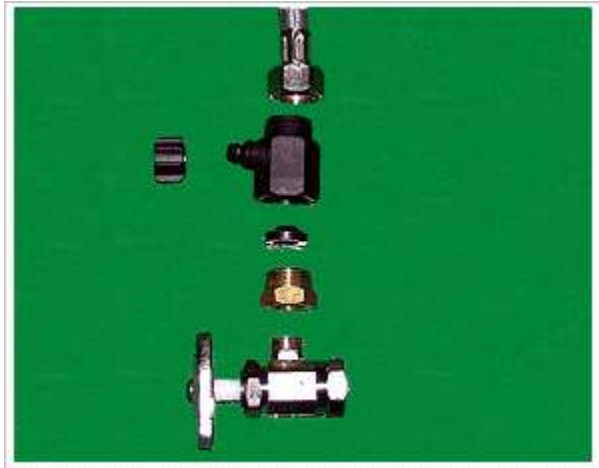


Connect metal tube part(#6), included as shown in illustration, if you don't already have one in place, to the sink.

Step 3

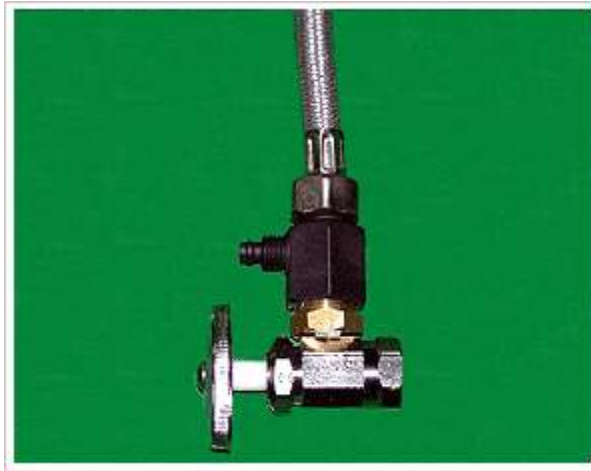

To the other end of the metal tube, connect part(#3) and part(#2), and then screw the on to part(#1) (T-joint)

Step 4

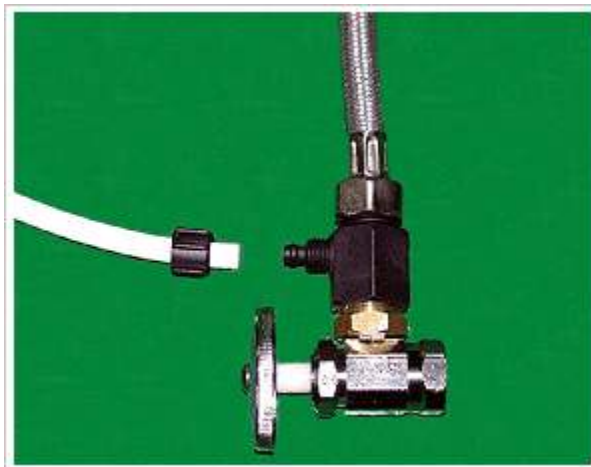


Cut the plastic water line, part(#5), to required size, slip part (#4) to the tube and attach tube to (#3). tighten part (#4)

Step 5

Slip on part (#4) to other end of water tube and attach the tube to part (#C). tighten part (#4)

Step 6

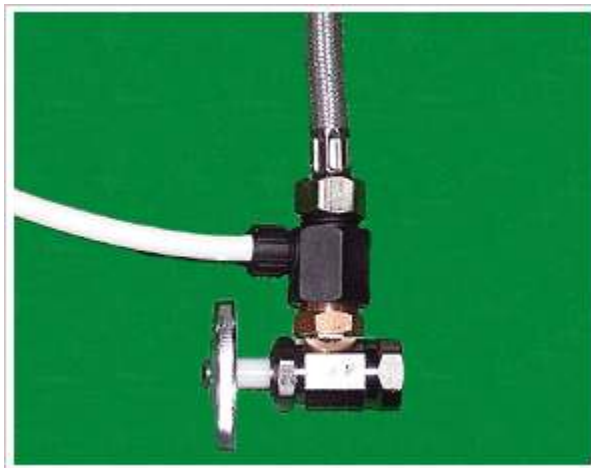

Follow above procedure for hot water line.

Bidet Installation


Step 1

Remove toilet seat.

Step 2



Step 3

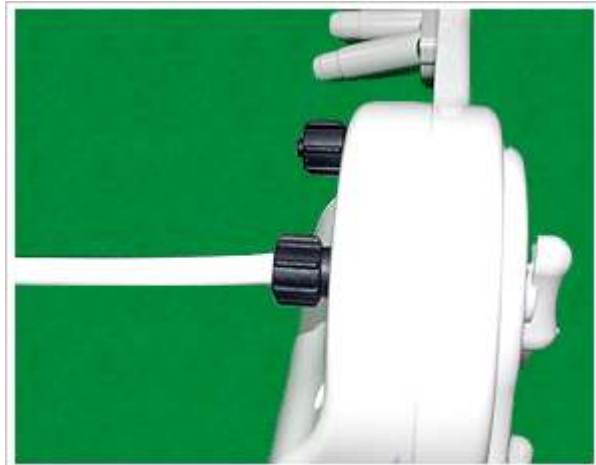

Step 4



Step 5



For more information or to order please contact:

Aviva Natural Health Solutions
52 Adelaide Street, Winnipeg MB R3A 0V7
Phone: 204.947.6789 - Fax: 204.947.8676
www.aviva.ca